


# Owl Meeting Camera Set up

- **Set up:**

- OWL comes with (OWL Device, Microphone Extender, USB-C cable, Power Cables, and Tripod)
- First download OWL Application for your device (<https://owllabs.com/download>)
- Connect OWL to Power
- Connect USB-C Cable to OWL to connect to your device
- (Optional) Connect Microphone extender to the owl (Connection is below Volume up and down buttons)
- Open OWL Application and check if it has recognizing the device (may take a minute to recognize)
- Should look like this

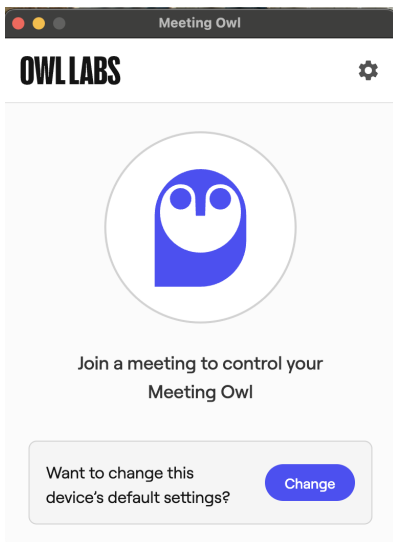

- Change Preferred Settings to fit needs of meeting
- Go to your meeting application and change MICROPHONE and CAMERA to **MEETING OWL**
- Set-up Complete

---

Revision #2

Created 21 February 2024 17:52:10 by Michael Armijo

Updated 21 February 2024 18:08:19 by Michael Armijo